

# OT/MF Series Feeders

## Operating your feeder

### A) Filling the Tank

- 1) Open the tank lid – pull back lid holder handles to release the lid, and lift.
- 2) To fill the tank, insert hose in top of tank and let milk flow into the tank.
- 3) Use the floating level indicator to determine when you have filled the tank to the desired level.
- 4) Push floating level indicator back inside the tank and screw down cap before transporting.

### B) At the Feed Site

- 1) Find as level ground as possible on which to park the feeder.
- 2) Unscrew the floating level indicator.
- 3) For removable trough feeders (MF) series, ensure the distribution pipes are positioned over the troughs.
- 4) Turn distribution valves to the troughs to the ON position.

On OT series feeders, use the levers at the front of the feeder to turn valves ON.

- 5) While feeding out, check the floating level indicator to monitor the volume of milk being distributed.
- 6) Turn the distribution valves OFF when the required level is reached.

## Cleaning


Stallion Plastics feeders come with an easy-click, clean-in-place cleaning system. Regular, thorough cleaning will help ensure the long life of your feeder. Rinse feeder with cold water after every use and wash at least once a week with warm soapy water.

Before cleaning, remove the feeder from your towing vehicle. Rinse tank first, followed by troughs.

### A) Cold water rinsing

Perform after every use.

- 1) Ensure all valves are open (red taps are parallel with pipes). This includes the drain valve at the base of the tank. *Photo 6*

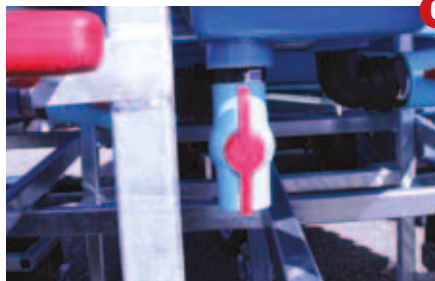

- 2) Attach a normal household hose to the hose connector at the top of the tank. Turn on the hose.